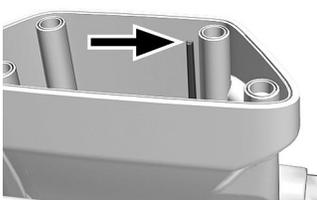
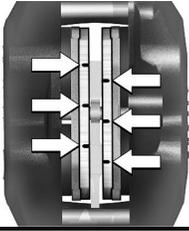


Service data 0A11 - R 1200 GS			
Designation	Condition	Value	Valid
11 - Engine			
Running-in speeds		<5000 min ⁻¹	
Engine oil, capacity	with filter change	approx. 4.2 l	
	Fluids and lubricants products recommended by BMW Motorrad		
Engine oil, specified level		Between MIN and MAX marks	
			
1134 - Valves with springs			
Inlet valve clearance	Engine cold max 35 °C	0.10...0.17 mm	
Exhaust valve clearance	Engine cold max 35 °C	0.34...0.41 mm	
1212 - Ignition wiring, spark plugs			
Spark plugs, manufacturer and designation		NGK LMAR8D-J	
17 - Cooling			
Cooling system test pressure	Test pressure must remain unchanged: min 5 min	1.5 bar	
Coolant, specified level	Engine cold	Between MIN and MAX marks on the expansion tank	
			
21 - Clutch			
Clutch-fluid level (repairs)	with new clutch liner, reservoir horizontal	Mark in reservoir	
	Hydraulic fluid (Vitamol V10)		
			
33 - Rear axle, rear-wheel drive and rear-wheel guidance			
Rear-wheel drive, oil capacity	Oil change	180 ml	
	Gear oil (Castrol SAF-XO)		
34 - Brakes			

<p>Brake fluid level, front</p> 	<p>Brake-fluid reservoir horizontal, motorcycle upright</p>	<p>It is impermissible for the brake fluid level to drop below the MIN mark.</p>	
<p>Hydraulic fluid (Brake fluid, DOT4)</p>			
<p>Brake fluid level, rear</p> 	<p>Brake-fluid reservoir horizontal, motorcycle upright</p>	<p>It is impermissible for the brake fluid level to drop below the MIN mark.</p>	
<p>Hydraulic fluid (Brake fluid, DOT4)</p>			
<p>3411 - front brake</p>			
<p>Brake disc thickness, front</p>	<p>When new</p>	<p>4.5 mm</p>	
<p>Wear limit</p>		<p>4 mm</p>	
<p>Brake-pad wear limit, front</p> 	<p>Friction pad only, without backing plate. The wear indicators (grooves) must be clearly visible.</p>	<p>1.0 mm</p>	
<p>3421 - Rear brake</p>			
<p>Brake-pad wear limit, rear</p> 	<p>Friction pad only, without backing plate.</p>	<p>1.0 mm</p>	
<p>Brake disc thickness, rear</p>	<p>When new</p>	<p>5 mm</p>	
<p>Wear limit</p>		<p>min 4.5 mm</p>	
<p>330 - Motorcycle wheels</p>			
<p>Permissible front wheel imbalance</p>		<p>max 5 g</p>	
<p>Permissible rear wheel imbalance</p>		<p>max 45 g</p>	
<p>Balancing weight for rear wheel Weight must be divided equally across both sides and weights attached to rim on left and right.</p>		<p>max 80 g</p>	
<p>Balancing weight for front wheel Weight must be divided equally across both sides and weights attached to rim on left and right.</p>		<p>max 80 g</p>	

331 - Wheels with earings

Vertical runout, front wheel		max 1.5 mm	
Lateral runout, front wheel		max 1.5 mm	
Vertical runout, rear wheel		max 1.5 mm	
Lateral runout, rear wheel		max 1.5 mm	

332 - res

Tyre pressure, front	Tyre cold	2.5 bar	
Tyre tread depth, front and rear	For Germany only	min 1. mm	
	Outside Germany	Country-specific legal reuirements	
Tyre pressure, rear	Tyre cold	2. bar	
Wheel valve test pressure		4 bar	

312 - eadlight

Distance between headlight and vertical surface For headlight adustment		10 m	
Distance between light/dark cut-off and mark at height of centre of headlight	Suspension set to basic setting and vehicle loaded with 85 kg	10 cm	

11 11 - Engine lock**hreaded plug or locking at DC in crankcase**

M1 x 1.5	30 Nm	
----------	-------	--

Bracket, engine guard to crankcase

M8 x 25	1 Nm	
---------	------	--

il drain plug to crankcase

M20 x 1.5	42 Nm	
-----------	-------	--

Engine guard to racket

M x 20	8 Nm	
--------	------	--

11 12 - Clinder head with cover**Clinder head cover to clinder head**

M x 7	10 Nm	
-------	-------	--

Cashat earing cap to clinder head

M x 35	tighten alternatel	
	10 Nm	

11 31 - Cashat**Cashat sprocket to cashat**

left exhaust camshaft, M10 x 1.25 x 35 - 10.	5 Nm	
other camshafts, M10 x 1.25 x 25 - 10.	5 Nm	

rigger or cashat sensor to cashat

--	--	--

M5 x 20	Nm	
Chain tensioner to clinder		
M18 x 1.5	30 Nm	
11 42 - il ilter and lines		
il ilter to crankcase		
Lubricate sealing ring with engine oil	11 Nm	
12 12 - Ignition wiring, spark plugs		
Spark plug to clinder head		
M10 x 1	12 Nm	
12 41 - Starter with astener		
Starter to gearox cover		
M x 40	12 Nm	
Wiring harness ground to starter		
M x 10	8 Nm	
Wiring harness positive to starter		
M, Replace nut Thread-locking compound (mechanical)	8 Nm	
13 71 - Intake air silencer		
Intake air silencer to tank racket		
M x 25	8 Nm	
13 72 - Air ilter		
Air ilter cover to intake air silencer		
M5 x 50	in diagonall opposite seurence	
	3 Nm	
1 11 - uel tank with iller neck		
uel tank to rae		
M8 x 45	1 Nm	
17 13 - Expansion tank		
Expansion tank to intake air silencer		
Screw for plastic, 5.5 x 1	4 Nm	
1 1 - Exhaust sste parts with ountings		
Bracket or exhaust anioldservootor to gearox		
M x 25	8 Nm	

Exhaust header to cylinder head		
M8	1 Nm	
Clap to silencer and exhaust anifold		
	22 Nm	
Silencer to rear rae		
M8 x 35	1 Nm	
21 2 - Clutch actuation hydraulics		
Clutch slave cylinder to gearox cover		
M x 20	tighten the screws twice	
	8 Nm	
Clutch line to clutch lever fitting		
M10 x 1	7 Nm	
Clutch line to clutch slave cylinder		
M10 x 1	7 Nm	
31 42 - telescopic forks		
Clamping screw or wick -release axle in telescopic fork		
M8 x 35	1 Nm	
32 71 - Motorcycle handlebars		
Handlebar weight to handlebar		
M10 x 50	40 Nm	
32 72 - handlebar lever		
Handlebar fitting to handlebar		
M x 30	8 Nm	
33 7 - Housing of level gears, rear		
Oil drain plug in level gears		
M12 x 1	20 Nm	
Oil filler plug to level gears		
M12 x 1.5	20 Nm	
34 11 - front brake		
Brake disc to front wheel		
M8 x 27, Replace screw Thread-locking compound (Micro-encapsulated)	tighten stages in diagonal opposite sequence	
	1 Nm	
Brake caliper on telescopic fork		
M10 x 5	38 Nm	
Bleed screw in front brake caliper		

34 21 - Rear brake		
Brake caliper to bevel gears		
Bleed screw in rear brake caliper		
Brake disc to wheel flange		
	tighten by stages in diagonally opposite sequence	
36 23 - Electronic components		
Wheel-speed sensor to telescopic forks/bevel gears		
36 31 - Wheels with bearings		
Quick-release axle in telescopic forks		
Rear wheel to wheel flange		
	tighten in diagonally opposite sequence	
RDC sensor to wheel rim		
46 53 - Side stand		
Side stand to pivot mount		
46 62 - Rear-wheel cover, number-plate carrier		
Number-plate carrier to rear frame		
Rear-wheel cover to rear frame		
Spray guard to bevel gears		

46 63 - Motorcycle fairing, windscreen

Bracket to windscreen and covers

Windscreen to windscreen holder

Cover for fuel tank, centre, to frame

51 16 - Mirrors, covers, ashtrays, stowage compartments

Mirror lock nut to adapter

Adapter to clamping block

61 13 - Lug, terminal

Wiring harness ground to cylinder head

61 21 - Battery with holder

Wiring harness to battery